



PCK-3282-11/PCK-2925-09/PCK-4101-16  
/PCK-3817-14/PCK-4263-18

### Installation Instructions

2011- Honda Odyssey

2009- Honda Pilot

2014- Acura MDX

### Service Installation Update/Revision

Failure to follow these instructions may lead to installation failure. Follow proper AGRSS standards.

### Materials Needed



- Precision Clip Kit
- Primer/Activator
- Urethane
- Isopropyl Alcohol

### Step 1

Mark each original clip location prior to removal to assist proper placement during new clip installation. Verify that all old clips are removed and the clip mounting areas are free from residue or debris. Use isopropyl alcohol or other non-oil based cleaner (*per primer manufacturer specifications*) to clean the surface where replacement clips will be mounted.


### Step 2

Be sure to properly prime mounting area, per urethane manufacturer's instructions.

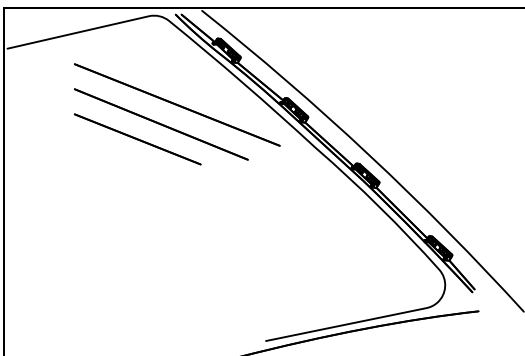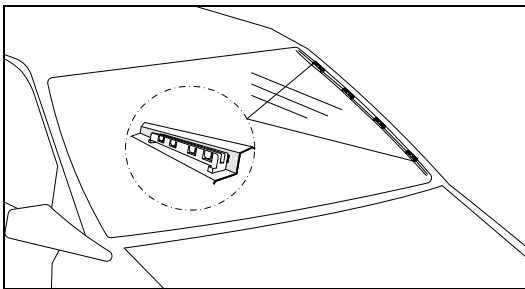



### Step 3

Remove the release liner from the clip adhesive, just prior to installation to minimize contamination. Using firm pressure, adhere the clip to the body on the A-Pillar in the same locations as the originals previously marked in step #1. Repeat until all clips are installed.

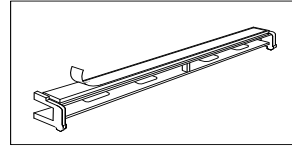

### Step 4

Add a bead, (1/8 inch) of urethane around the base of the clip. Ensure that the urethane is applied over the small foot bases and around the sides. Refer to the urethane manufacturer instructions for recommended application process.

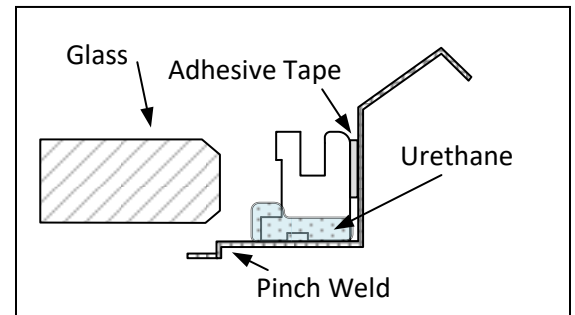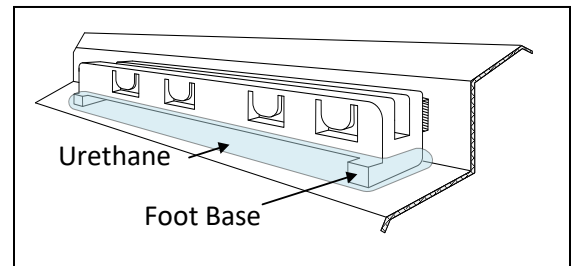

### Step 5

Install the windshield side molding. It is recommended that Molding Retention Tape is applied over the windshield side molding to prevent the windshield side molding from shifting while the urethane cures.

For More information, Contact:  
4611 Camp Philips Rd  
Weston, Wi 54476  
Toll Free: 800-367-8241  
[info@prp.com](mailto:info@prp.com)  
[www.prp.com](http://www.prp.com)