



**PCK-3282-11/PCK-2925-09
Installation Instructions**

**-2011-2016 Honda Odyssey
-2009-2015 Honda Pilot**

Service Installation Update/Revision

Failure to follow these instructions may lead to installation failure. Follow proper AGRSS standards.

Materials Needed



- Precision Clip Kit
- Primer/Activator
- Urethane
- Isopropyl Alcohol

Step 1

Verify that all the old clips are removed and the clip mounting area is free from residue and debris. Use isopropyl alcohol in areas that need to be cleaned. *(Do not use an oil based cleanser.)*


Step 2

Be sure to properly prime mounting area, per urethane manufacturer's instructions.

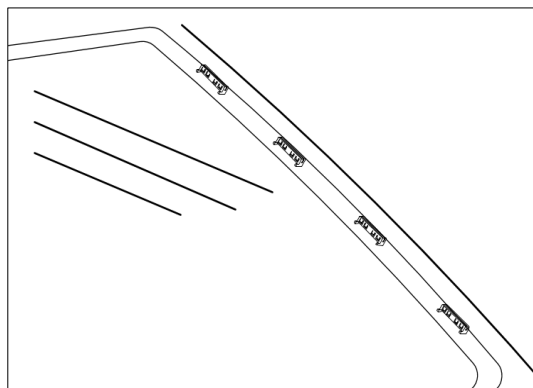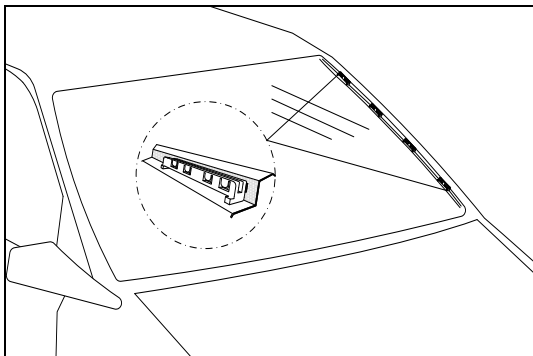



Step 3

Remove the release liner from the clip adhesive, just prior to installation to minimize contamination. Using firm pressure, adhere the clip to the body on the A-Pillar in the same locations as the originals previously marked in step. Repeat until all clips are installed.

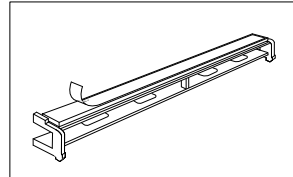

Step 4

Add a bead, (1/8 inch) of urethane around the base of the clip. Ensure that the urethane is applied over the small foot bases and around the sides. Refer to the urethane manufacturer instructions for recommended application process.

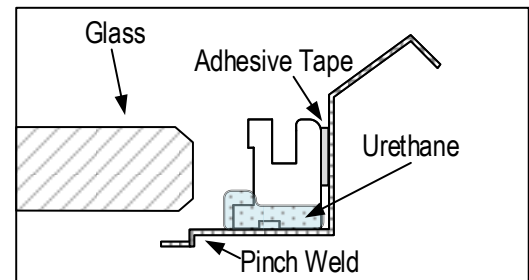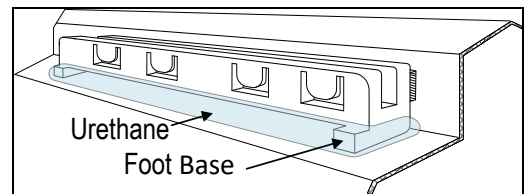

Step 5

Install the windshield side molding. It is recommended that Molding Retention Tape is applied over the windshield side molding to prevent the windshield side molding from shifting while the urethane cures.

For More information, Contact:

4611 Camp Philips Rd
Weston, Wi 54476
Toll Free: 800-367-8241

info@prp.com

www.prp.com